

This manual contains important instructions that should be followed during installation and maintenance of the UPS and batteries. Read all instructions before operating the equipment and save this manual ...

Instructions on how to unpack the product

Installation or replacement of batteries must be located in a **SERVICE ACCESS AREA**: The service manual shall include the following instructions for battery replacement and disposal:

Do not put your hands or feet under the cabinet while lifting the pallet. Failure to follow these instructions can result in death, serious injury, or equipment damage.

Cover the units and store the units in a temperature controlled indoor environment free of conductive contaminants and humidity, where the units are protected from moisture until the time of start-up. ...

If the UPS installation environment is in poor condition and the UPS needs to be stored for a long time after it is unpacked, take measures to prevent dust. It is recommended that the UPS be wrapped with ...

Move the battery cabinet as close as possible to the final location with a pallet truck or a forklift before unpacking. Remove the packaging (cardboard, plastic, and foam corners). Open the front door, lift it ...

If Eaton battery cabinets are located in the same room as the UPS, the battery cabinet environmental requirements supersede the UPS requirements. Operating temperatures above the recommended ...

Connect the battery cable accessory to one end of the battery port on the rear panel of the UPS and connect the other end to any battery port on the rear panel of the EBC.

This manual guides you through receiving and unpacking your new 60-80 kVA UPS and Classic Battery Cabinet system. Learn about safe handling, storage, and unpacking procedures for both the UPS ...

Web: <https://black-hat.co.za>